

Operation Instruction

1 Pair

1.1 Single Group Pair

Step1: Turn ON the light and finish Step 2-3 in **10** Seconds

Step2: Press any number from 0-99 and then press "ID" key

Step3: Repeat Step-2, the light blinks once to confirm a successful pairing action

2. Single group control or All control

2.1 Single Light control

Press the ID number of the light and then press any desired function key

2.2 All Control

Press **ALL** key and choose any function key to execute it across all paired lights

3. Dimming and CCT Adjusting Function

Press the ID number of the light and toggle the 4 Step dimming keys to change intensity and 4 Step CCT adjusting keys to vary the color temperature

Step-less control the temperature and color using the 4 keys on the circular button besides the **ALL** key.

3.1 Four Scene Mode

4 scene modes can be preset with the default settings as follows :

Scene	Dimming and CCT	Dimming	RGB Controller	ON/OFF Controller
A	10%/Brightness/Warm	10% Brightness	Fade	OFF
B	30%/ Brightness /Natural White	30% Brightness	Smooth	ON
C	50%/ Brightness /White	50% Brightness	Strobe	OFF
D	100%/ Brightness /Cool White	100% Brightness	Flash	ON

3.2 Scene Mode Setting

Step 1: Adjust the characteristics of the light as you like, such as brightness, CCT, ON, OFF


Step 2: Press **ALL** key or any other ID number of the lights

Step 3: Press **ID** key and then press **A** / **B** / **C** / **D** key, the light flickers and finishes setting.


3.3 Scene Mode Usage

Press **ALL** key or ID of the lights, and then **A** / **B** / **C** / **D** key to use the scenes

Dimming and CCT Adjusting Function

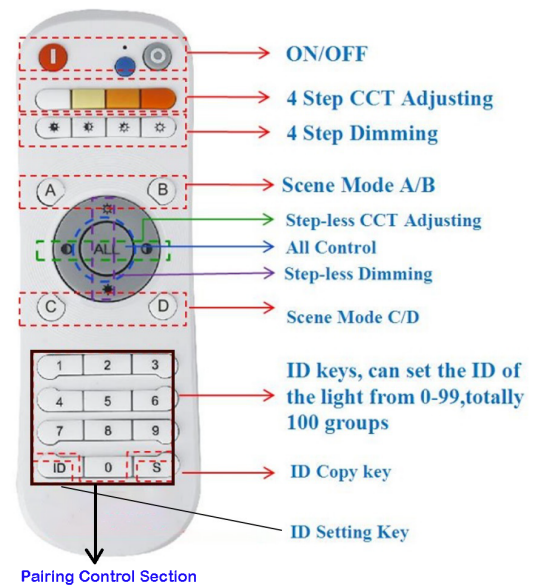

* New Remote Model supports RGBW operation along with CCT variation

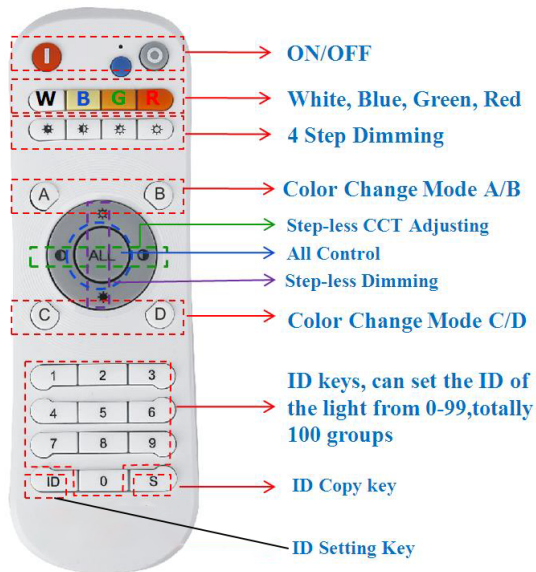

4. RGB Function

4 Colored keys [White, Blue, Green, Red] can be used to operate RGBW modes along with CCT adjustment for dual color lights.

4.1 Four Color Change Mode

- 1) **A** Color fade mode
- 2) **B** Color smooth mode
- 3) **C** Color strobe mode
- 4) **D** Color flash mode

5. Remote Controller ID Setup Function

5.1 Remote ID Copy

Press the " **⊙** " key of the remote whose ID you want to be copied

and the " **I** "key of the other remote that will copy for 5 seconds until the indicator blink 3 times, finishing the finish ID copy

Note: After ID copy, all the remote controllers have same function and control authority.

5.2 Remote Controller ID Setup

Step-1: Press " **S** " key and hold for 5 seconds, till the indicator turn ON. Finish the next setting within 10 seconds

Step-2: Set the ID number of the remote using the number keys, the setting range is 0-60000, and then press **S**

Step-3: Repeat Step-2, the remote indicator blinks 3 times and finishes setting.

Note: The default ID number of the remote is random, and remotes with common ID number have the same functions and control rights.